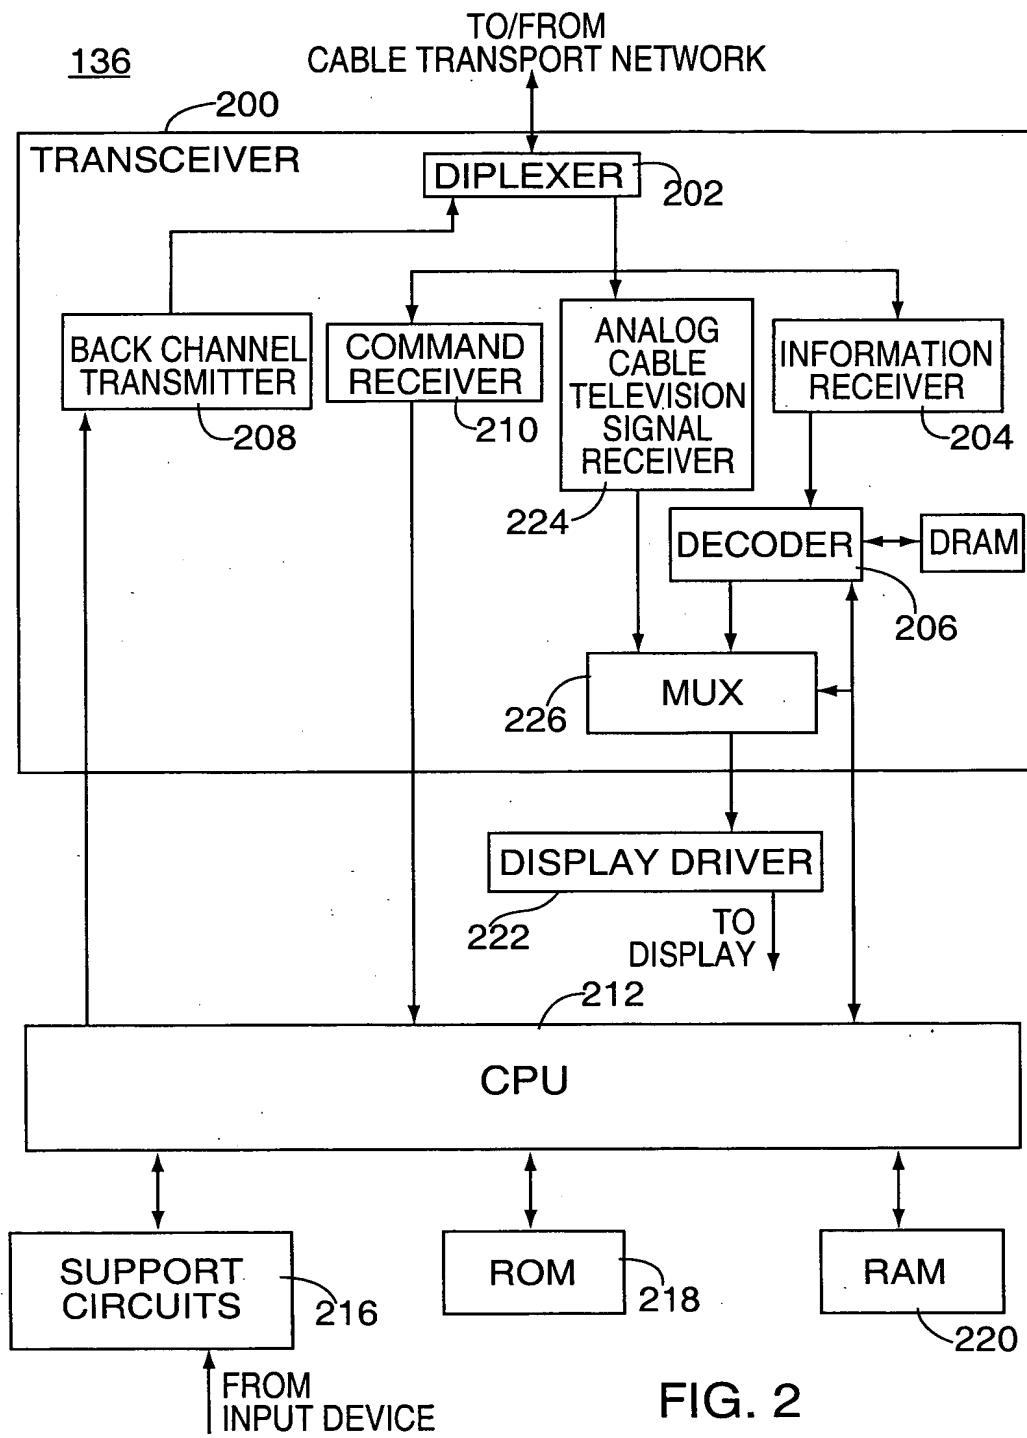


FIG. 1



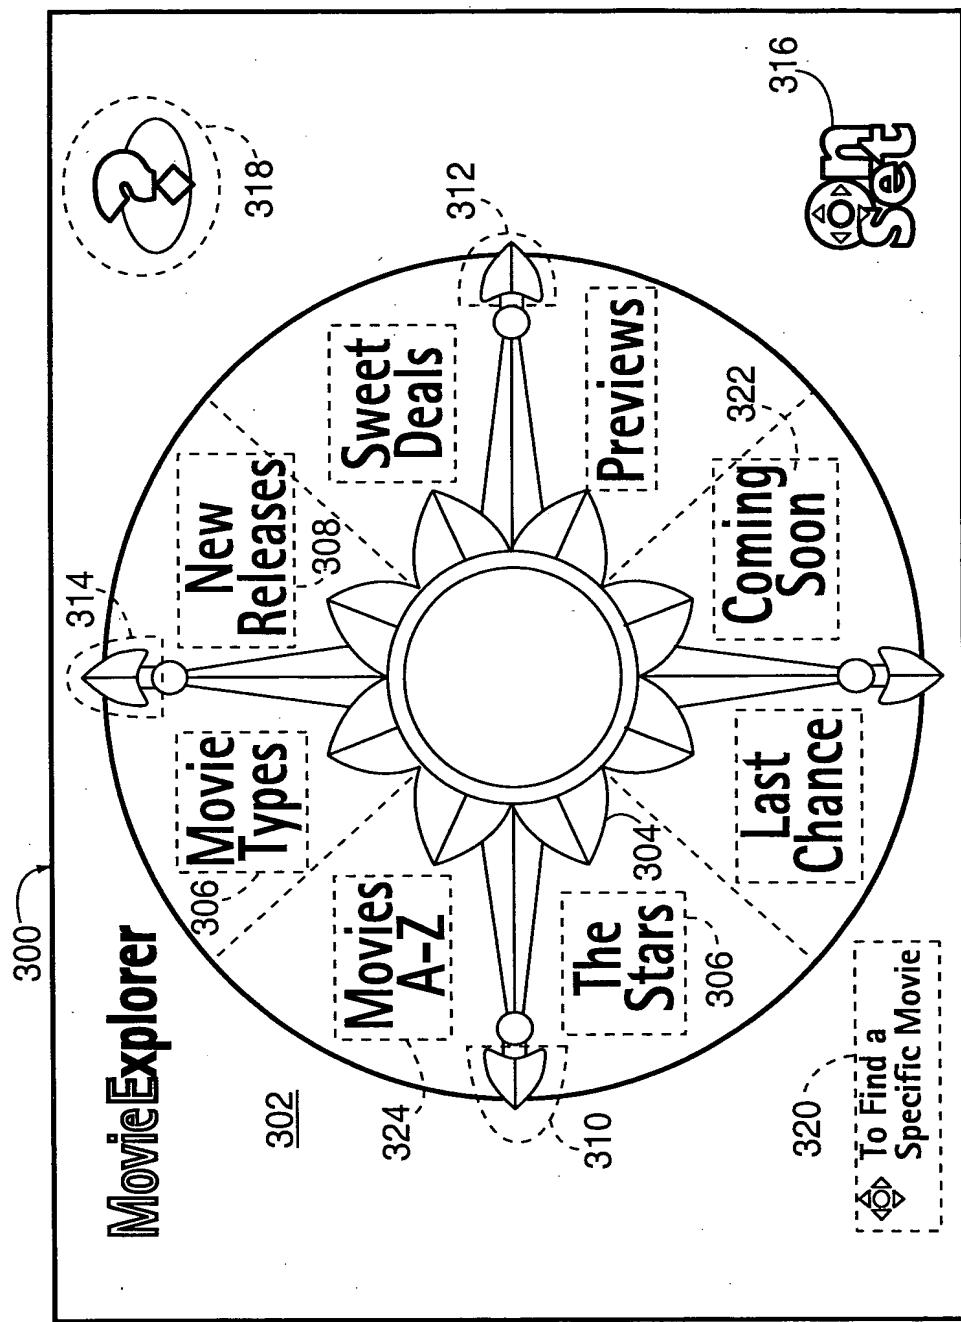


FIG. 3

4/20

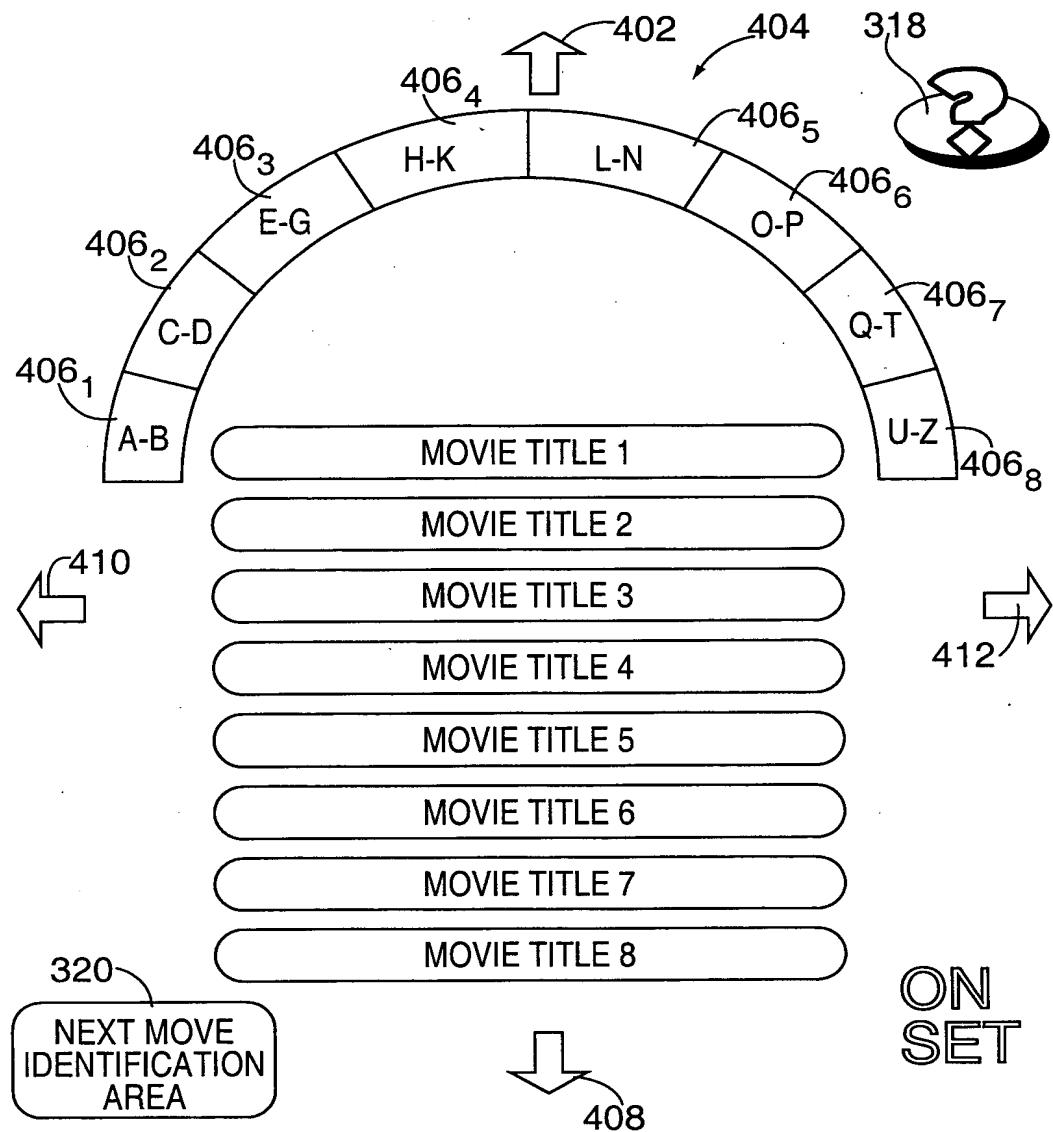


FIG. 4

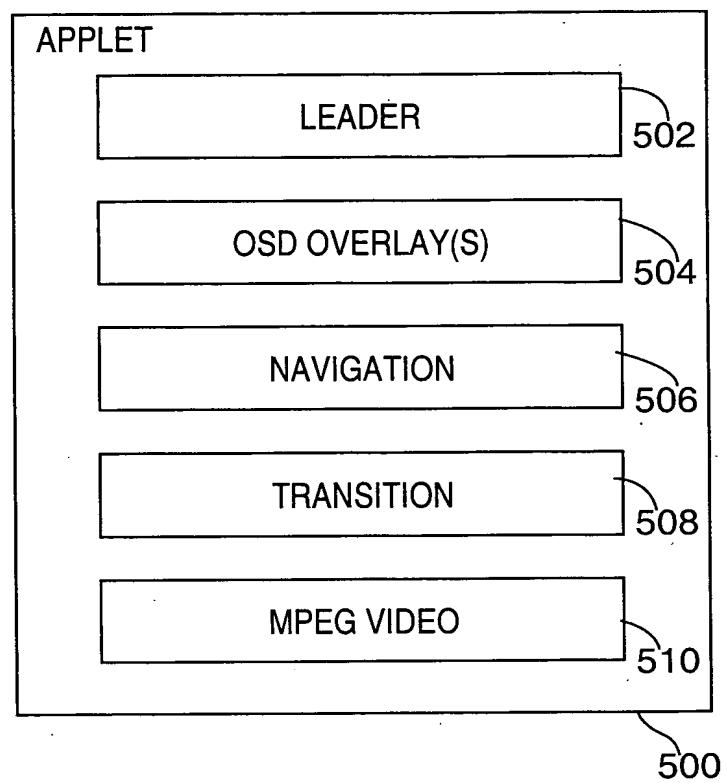


FIG. 5

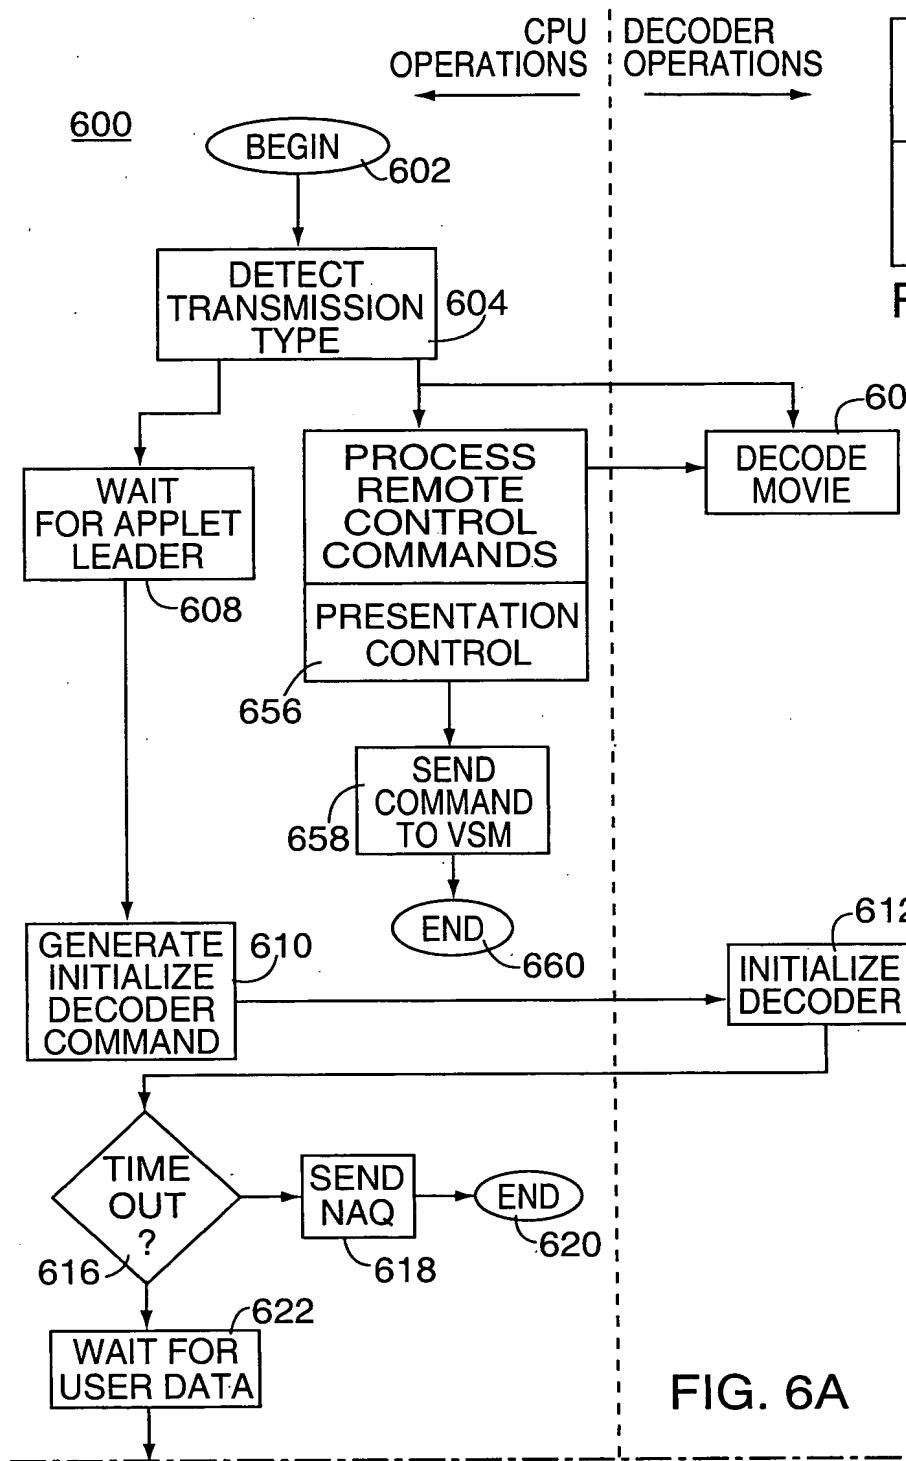
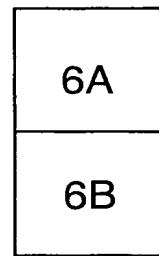


FIG. 6

FIG. 6A



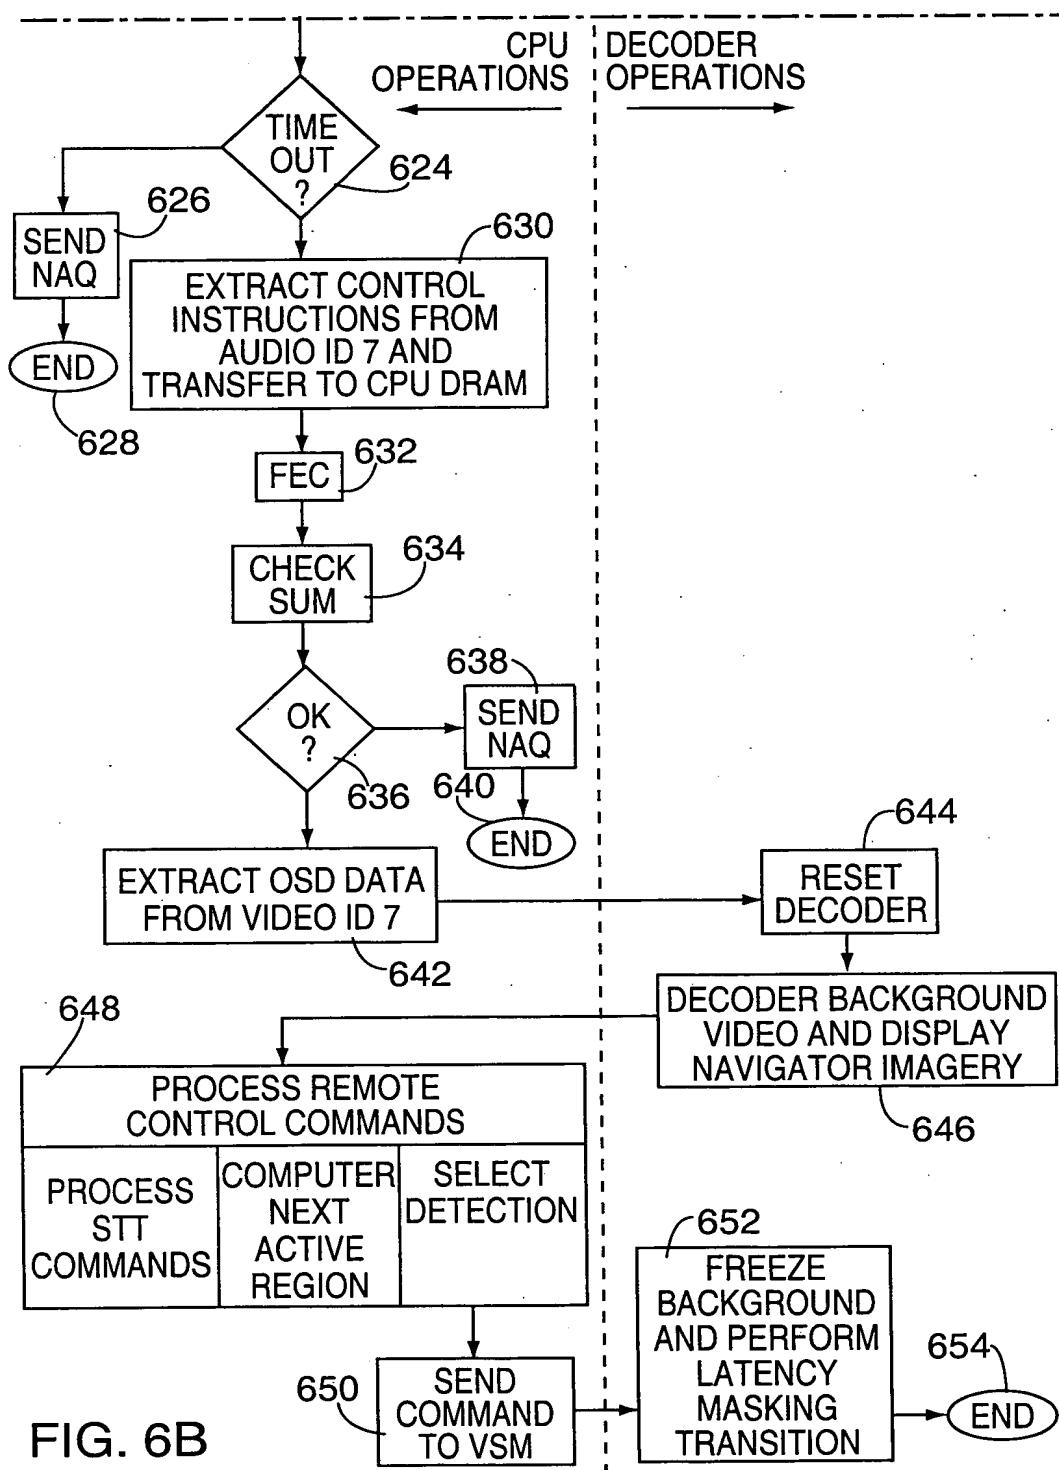


FIG. 6B

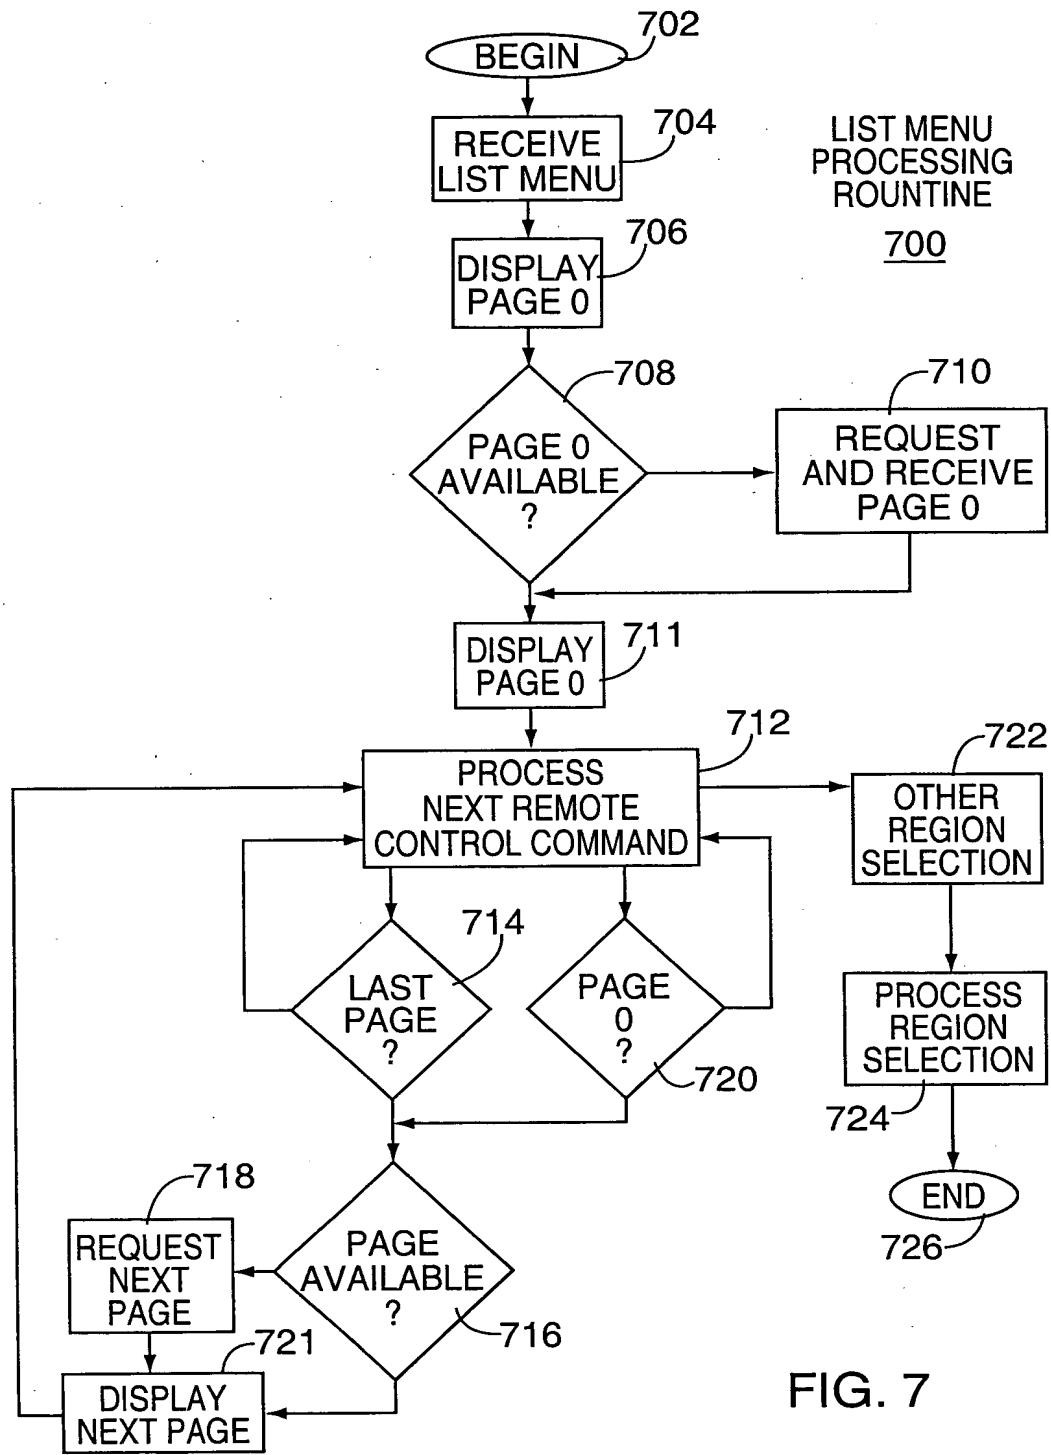


FIG. 7

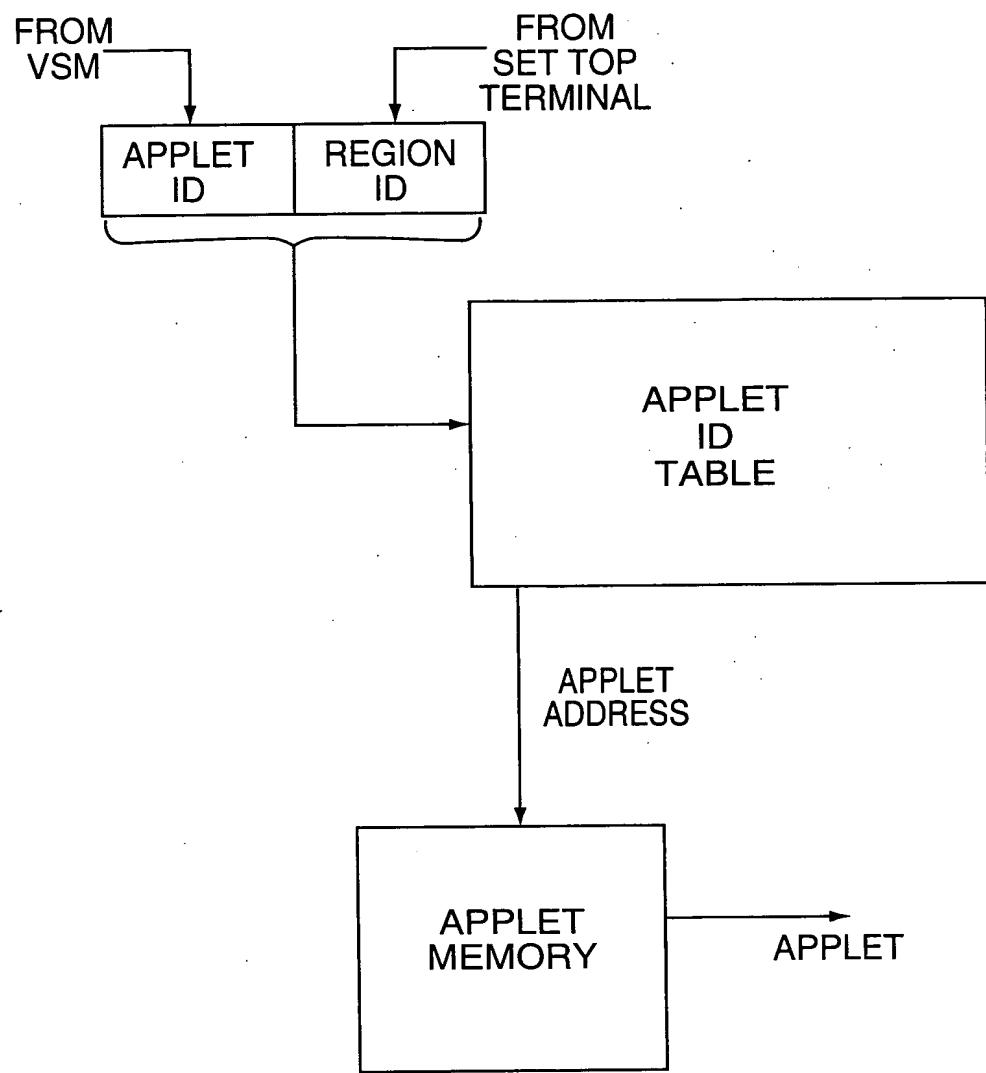


FIG. 8

10/20

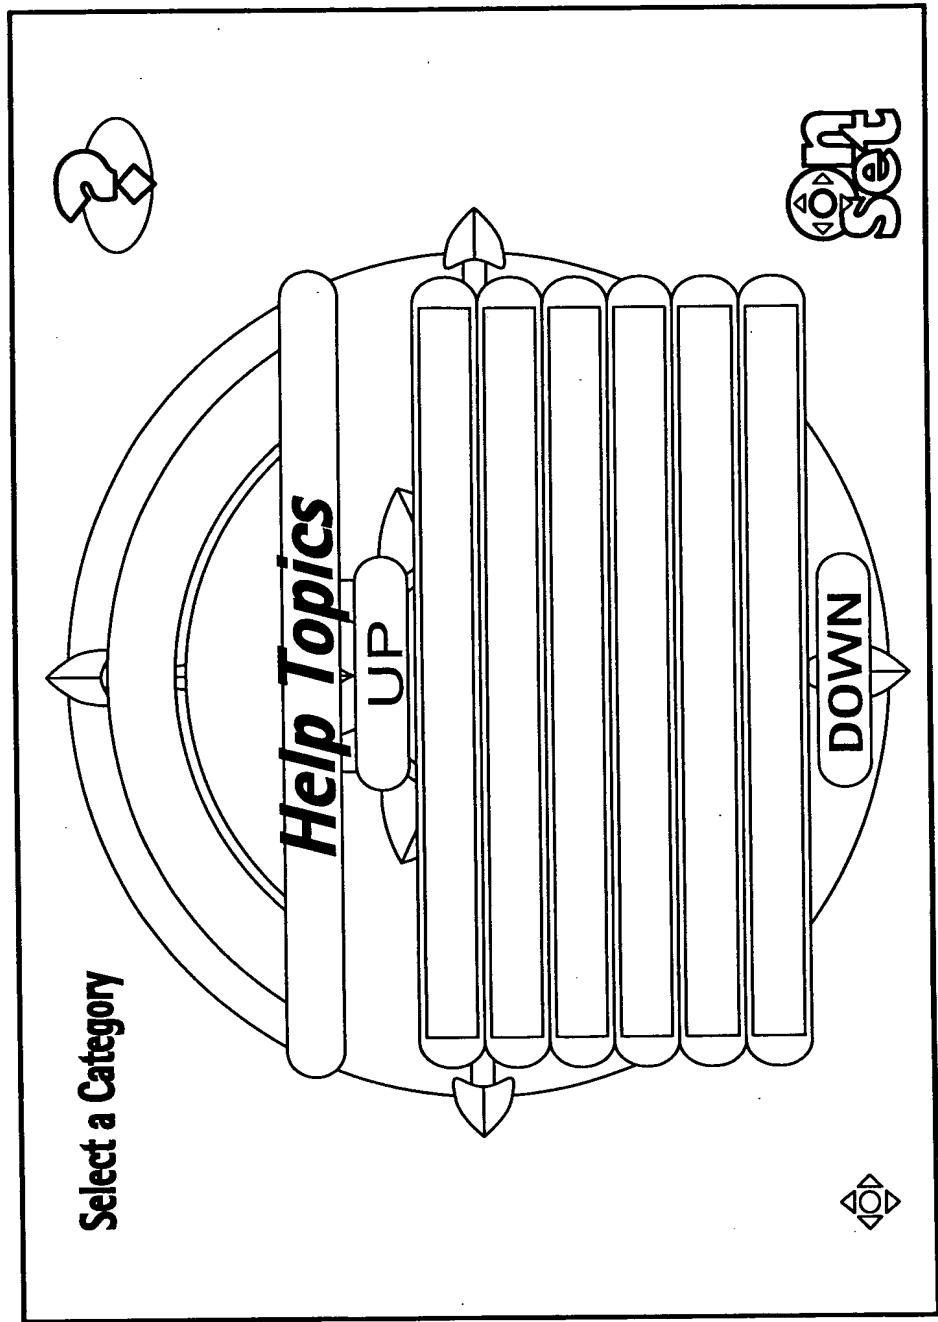


FIG. 9

11/20

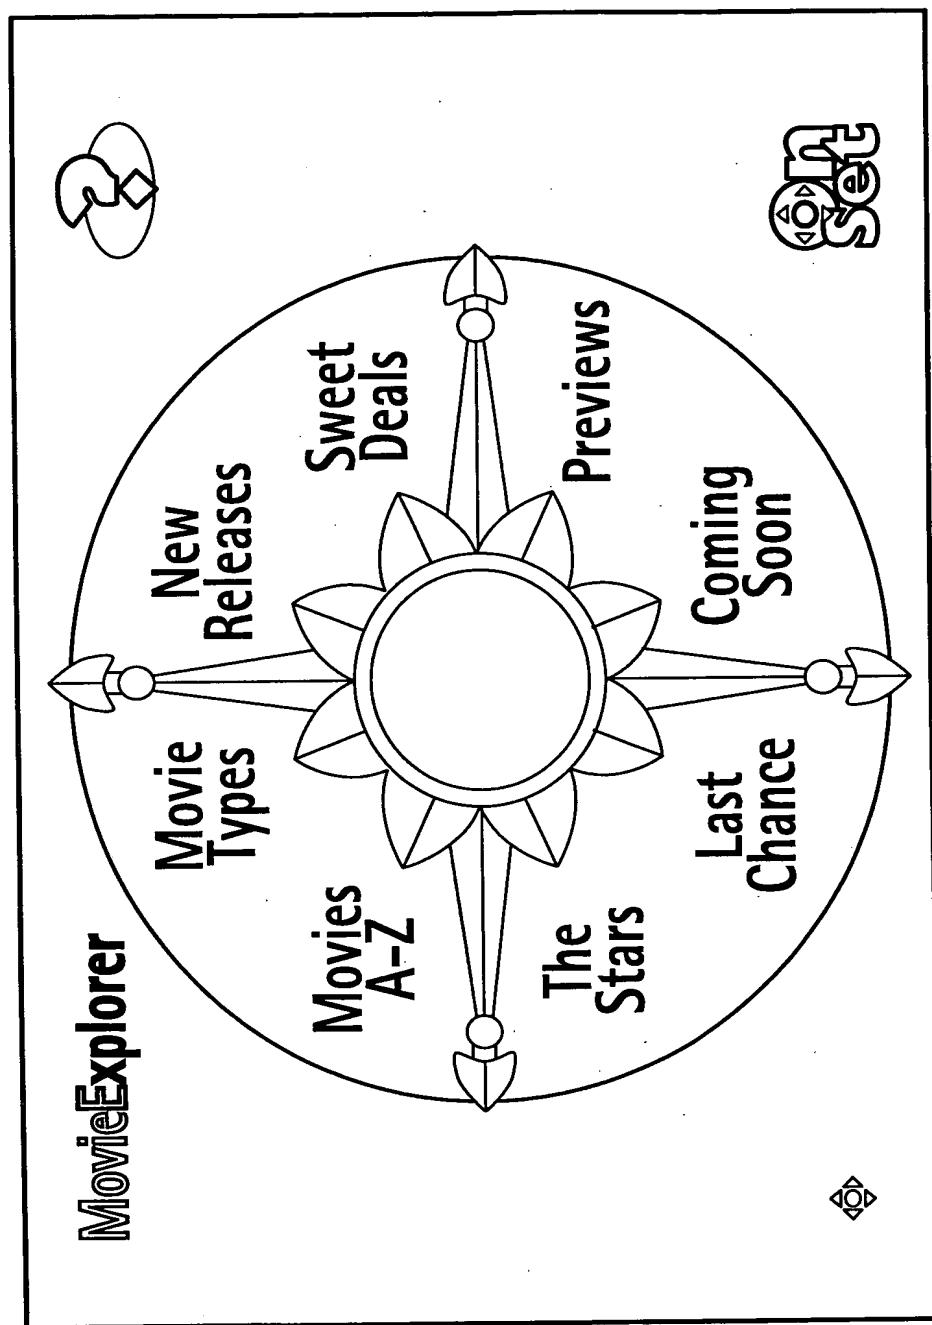


FIG. 10

12/20

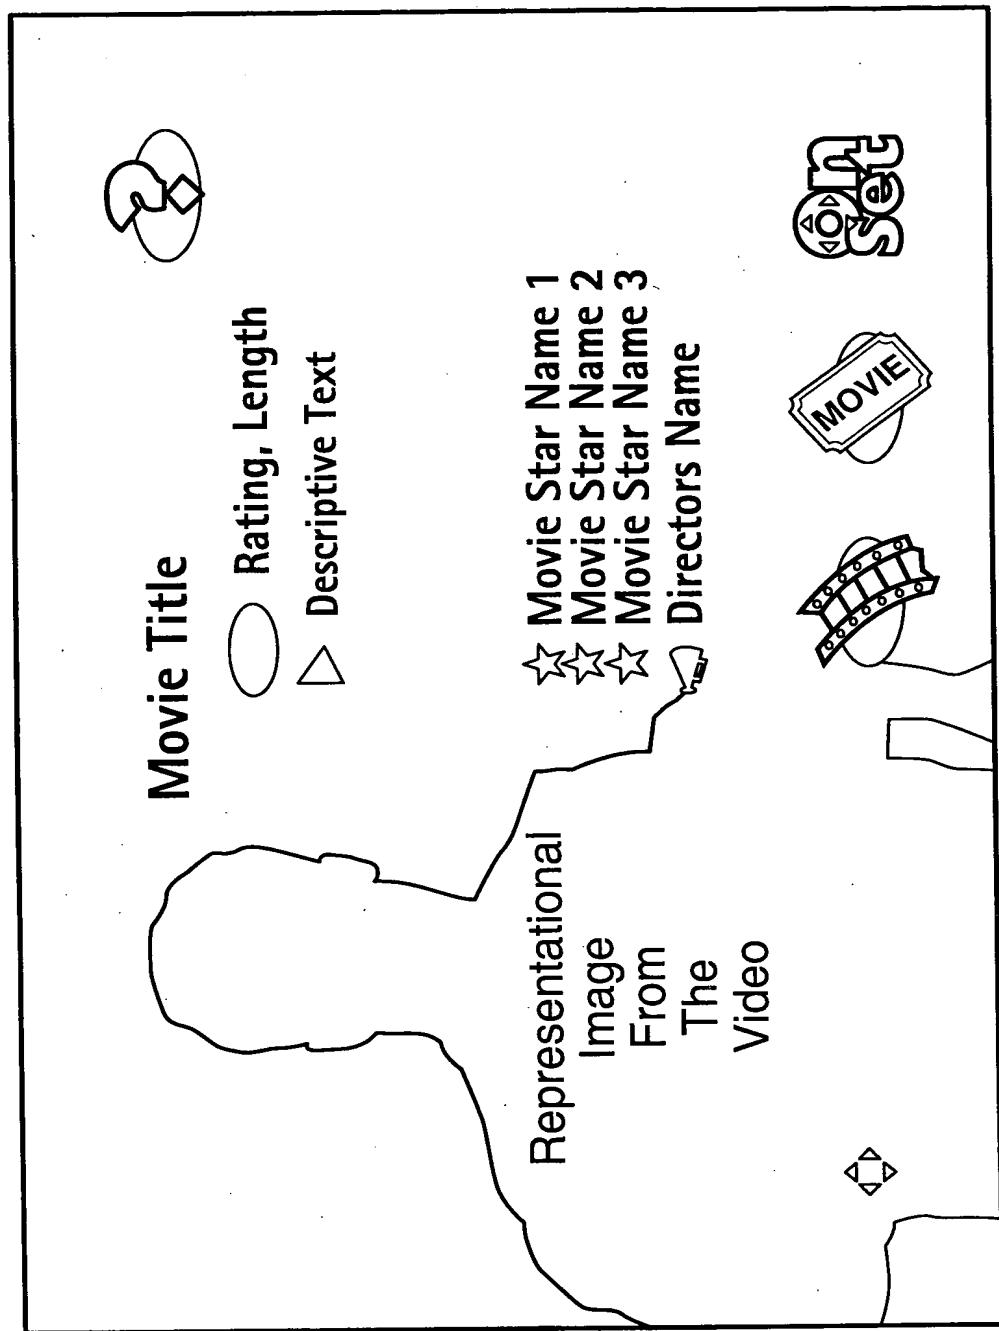


FIG. 11

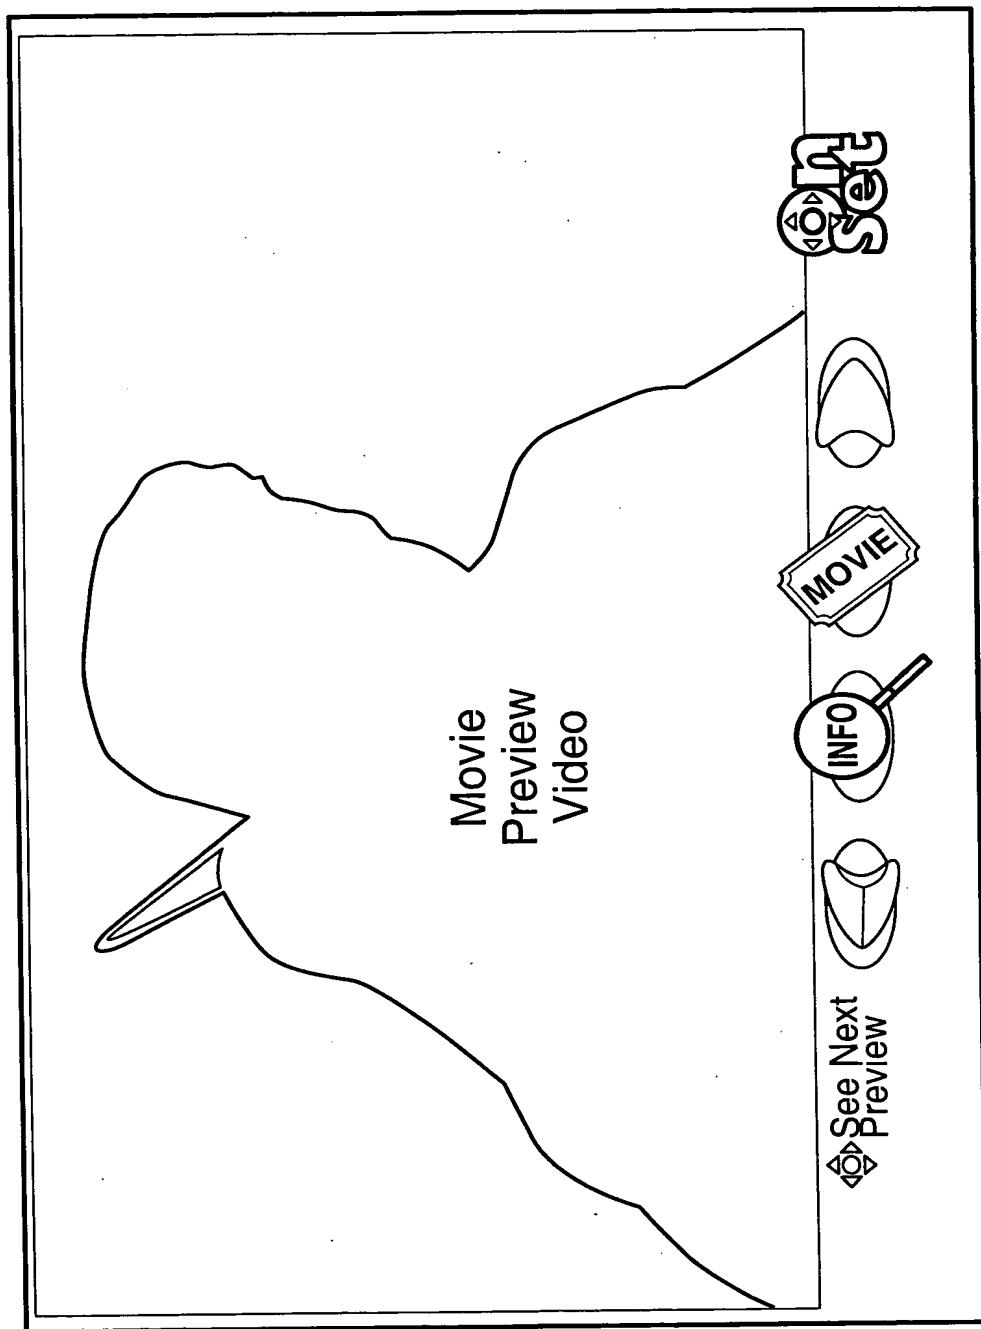


FIG. 12

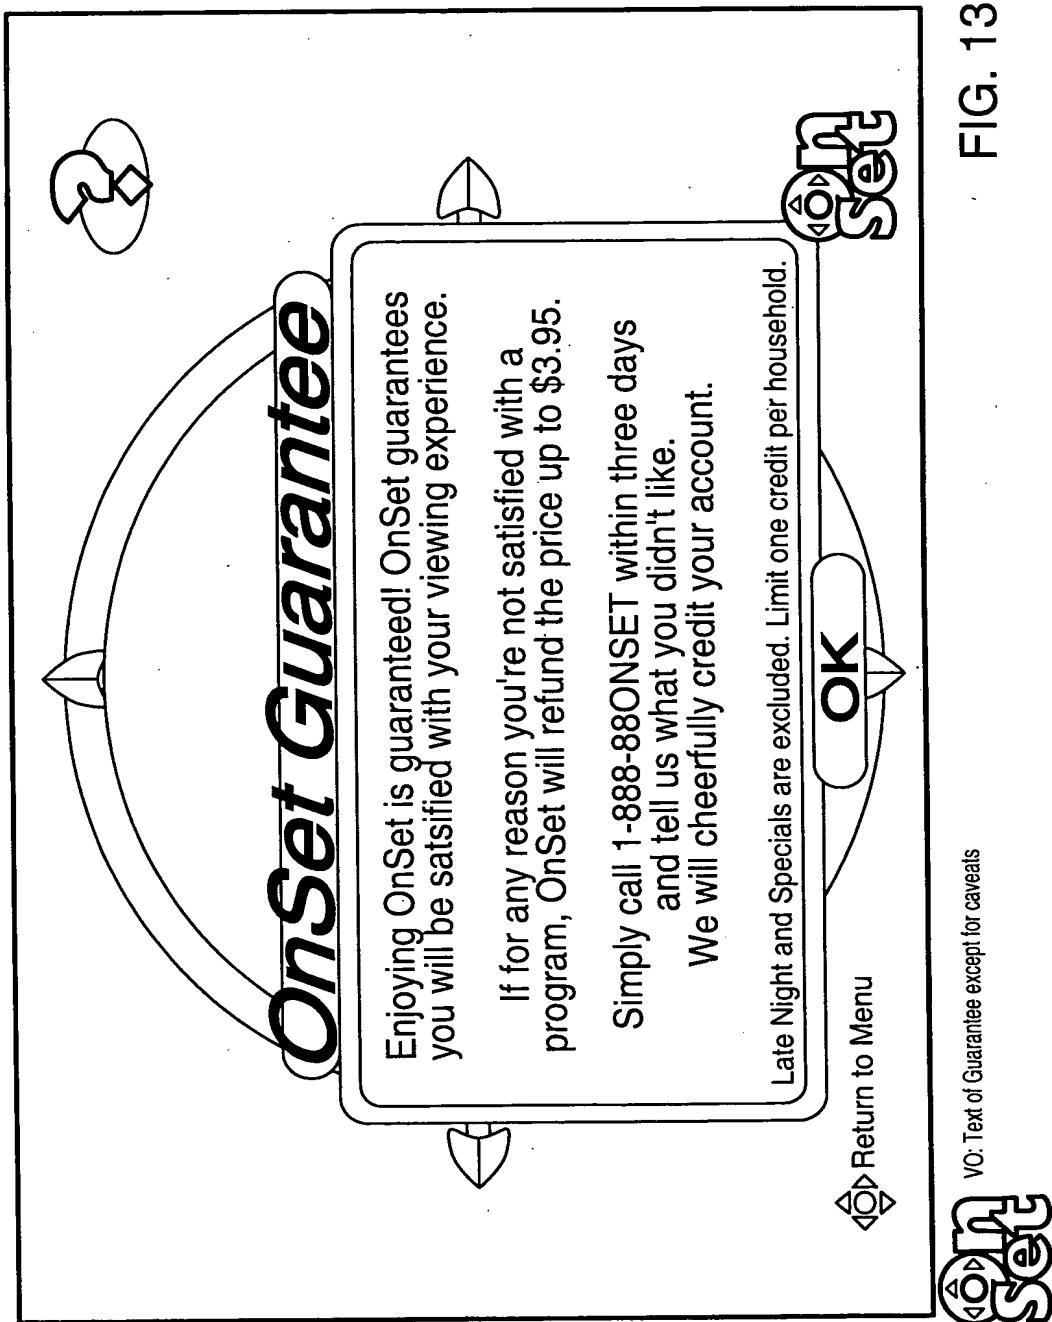


FIG. 13

VO: Text of Guarantee except for caveats

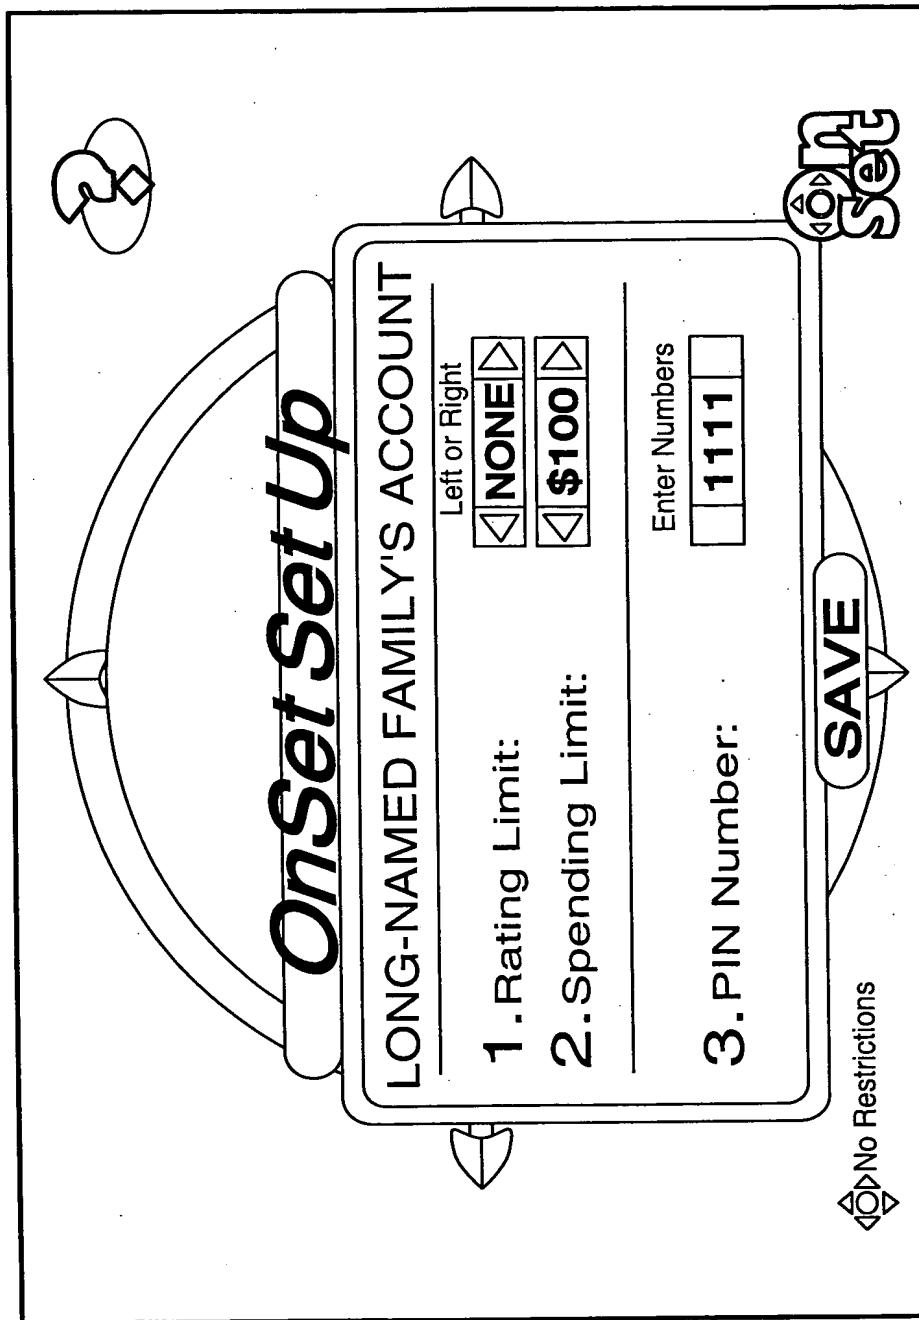


FIG. 14

VO: It's easy to set ratings and spending limits. Highlight a limit and move the OnSet Button left or right to change it. To set or reset the PIN Number, just enter four digits from the remote control. Select "Save" when you're done, or press "Return" to

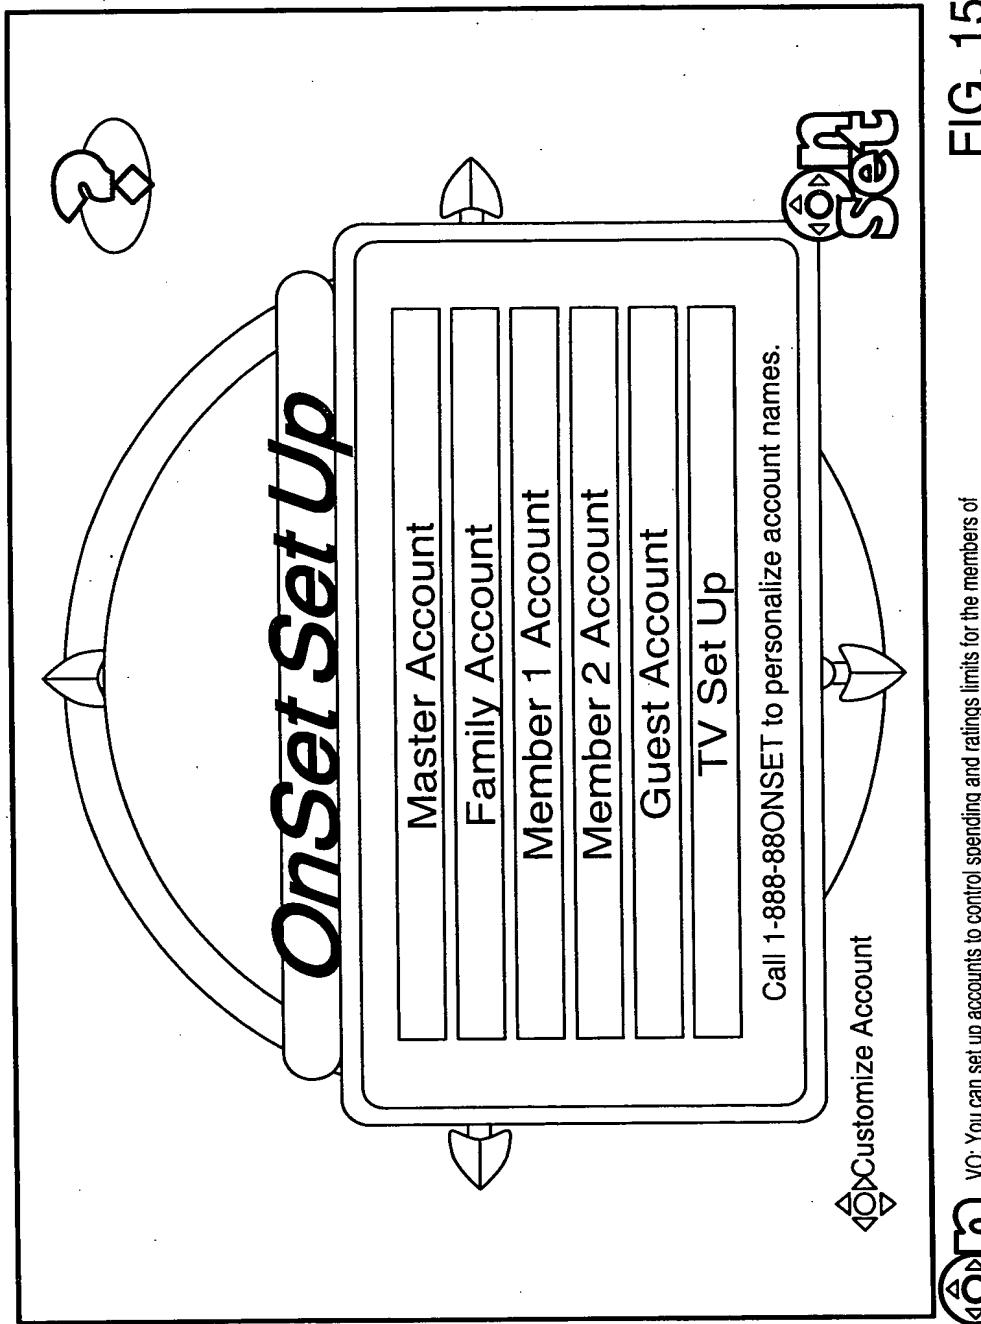


FIG. 15

VO: You can set up accounts to control spending and ratings limits for the members of your family. You can also set up this TV to require PIN numbers to use OnSet.



17/20

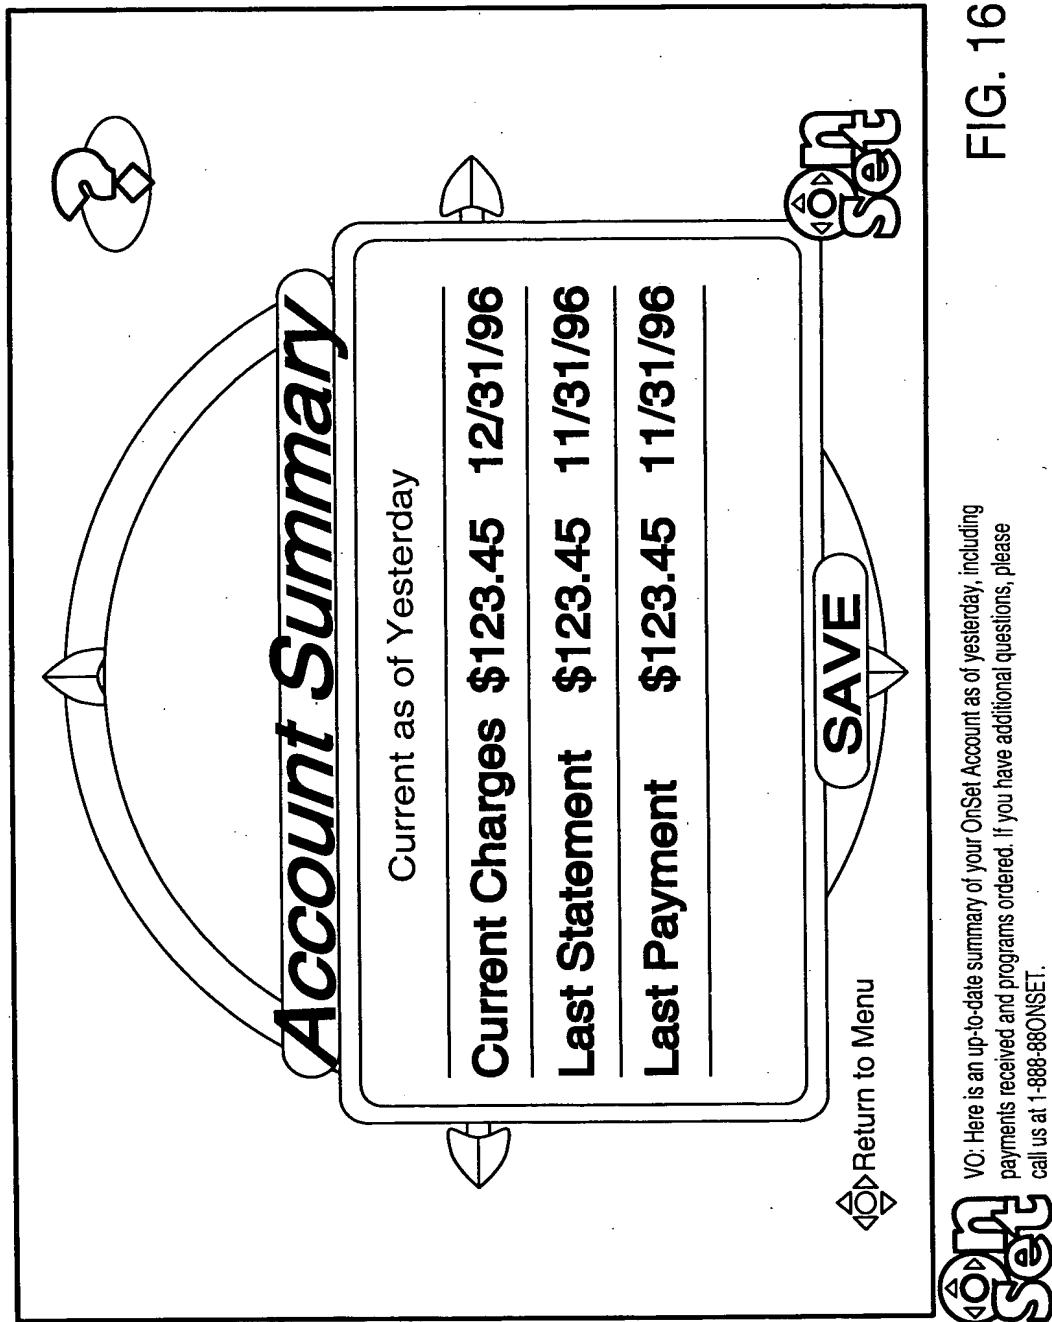


FIG. 16

VO: Here is an up-to-date summary of your OnSet Account as of yesterday, including payments received and programs ordered. If you have additional questions, please call us at 1-888-880NSE1.

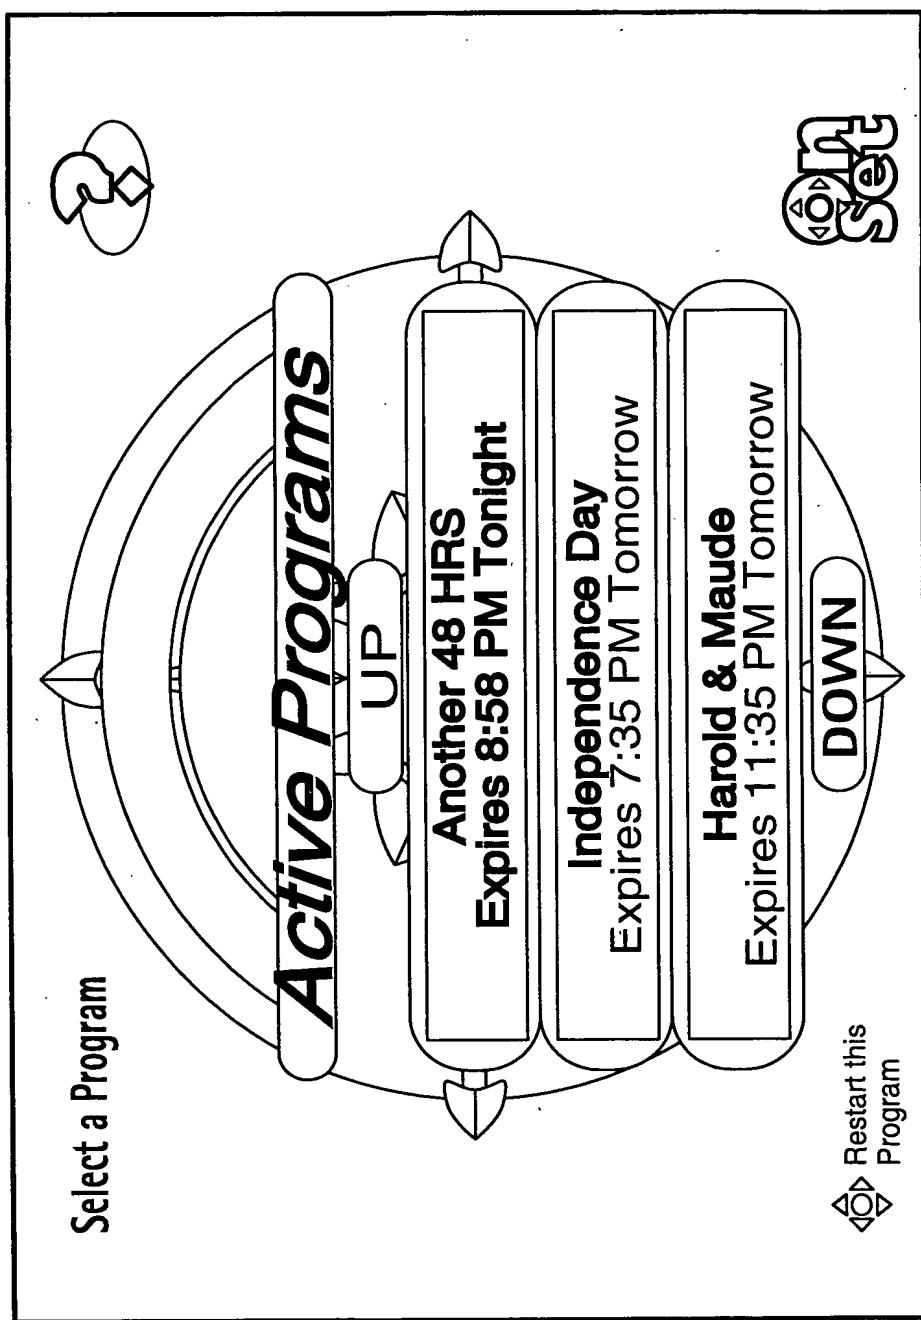


FIG. 17

VO: This screen lets you decide whether to require a PIN Number to use OnSet on this TV.
Move Left or Right to change settings. When you're ready, select 'Save'.

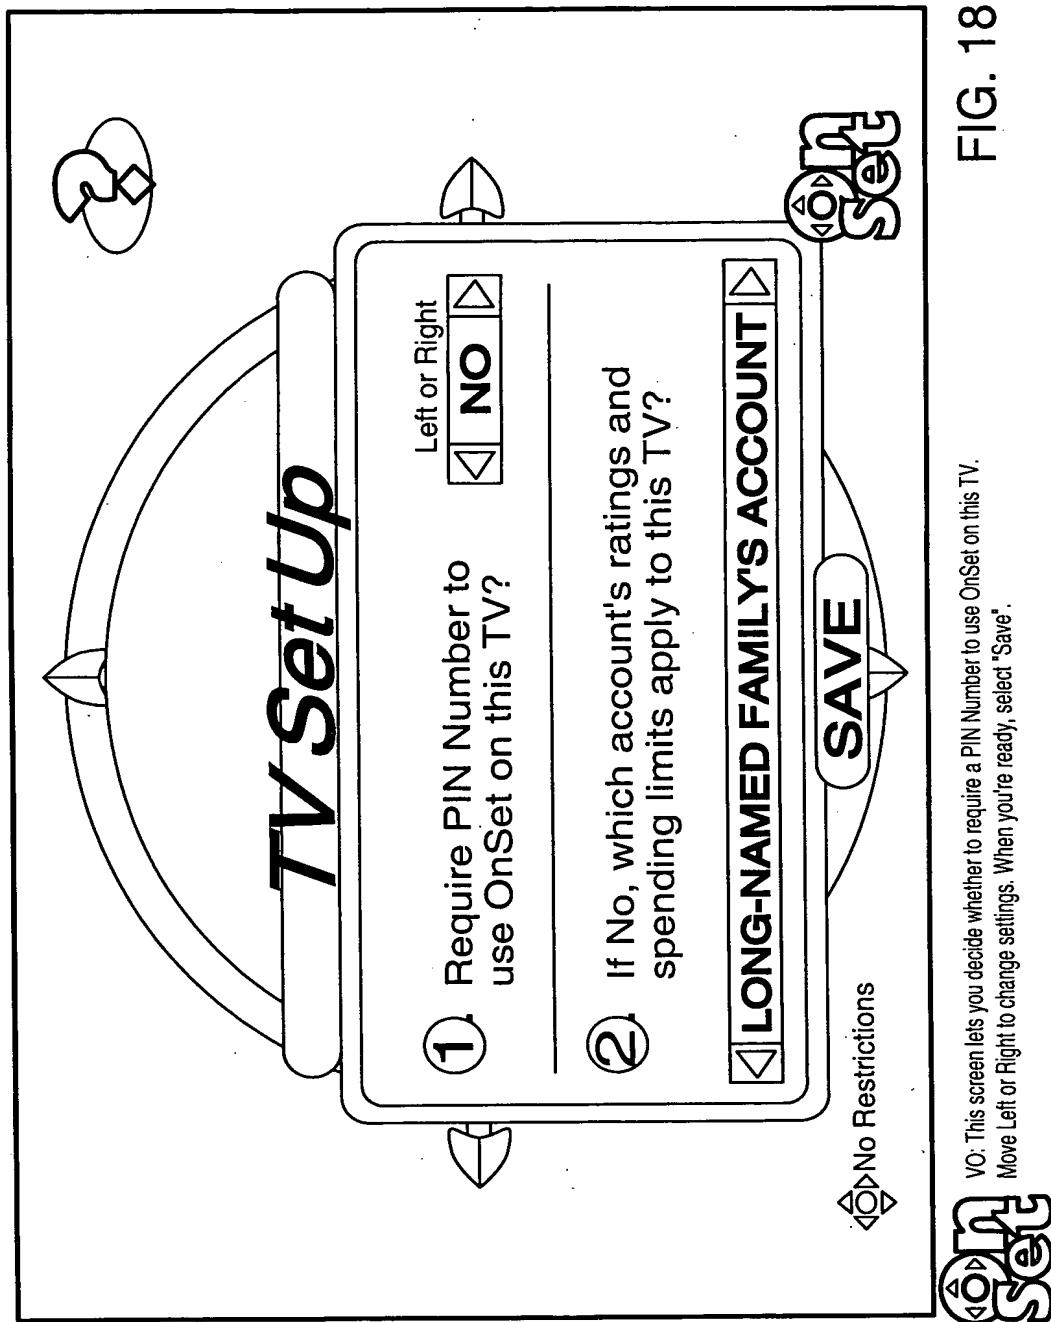


FIG. 18

VO: This screen lets you decide whether to require a PIN Number to use OnSet on this TV.
Move Left or Right to change settings. When you're ready, select "Save".

20/20

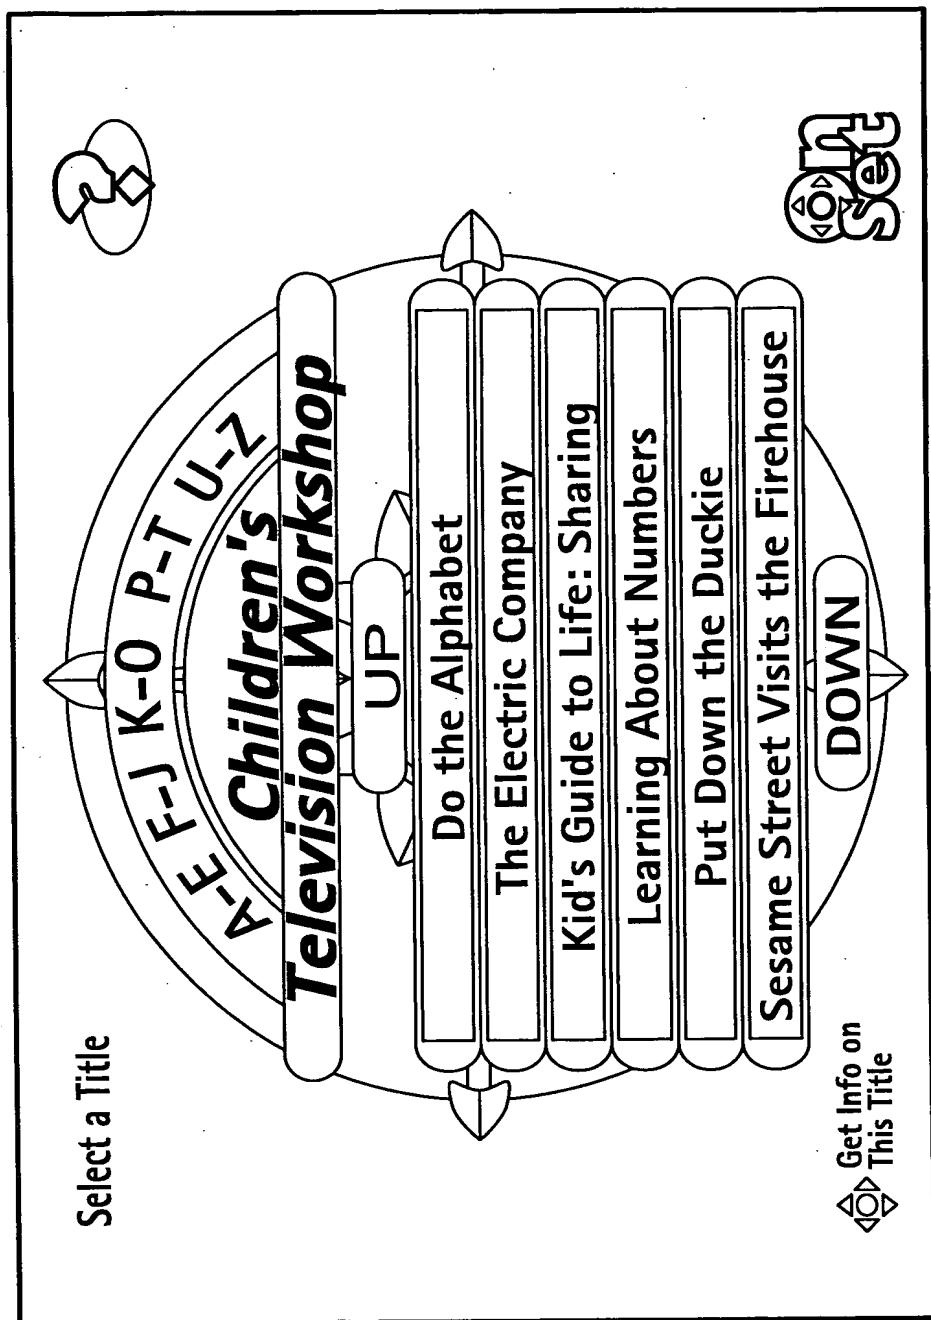


FIG. 19